


Technical Support



There are many ways to install the TV Messenger. Use one of the methods listed or vary the installation to meet your needs.


Cable

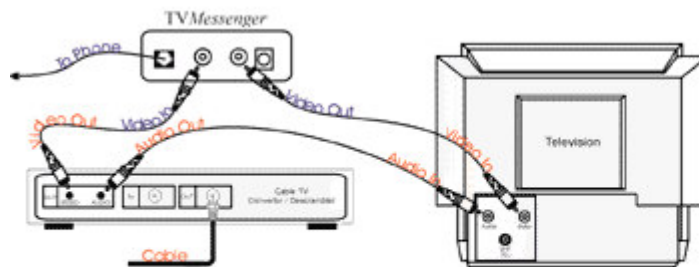

Scenario #1 - Installation Highlights

1. Main cable feed is attached to the Cable Boxes "Antenna In" outlet.
2. The TVMessenger is installed between the RCA Video In / Video Out jacks of the TV and Cable Box.
3. The TVMessenger is connected to a phone jack.
4. The TV is set to the "Video Input" (ext).
5. Channel selection is done from the Cable Box.

TVMessenger Installation with a Cable Box and Television

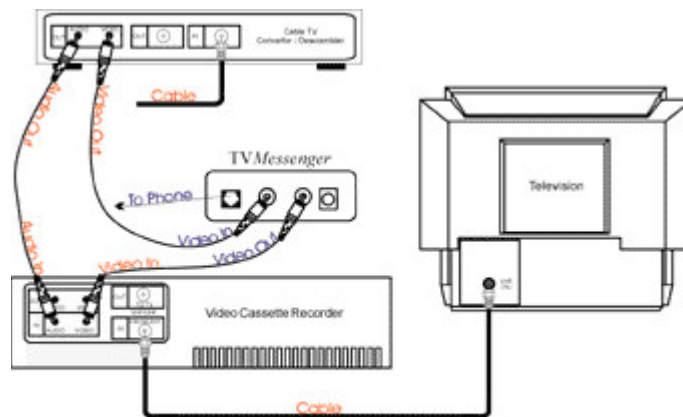


Scenario #2 - Installation Highlights

1. Main cable feed is attached to the Cable Boxes "Antenna In" outlet.
2. The TVMessenger is installed between the RCA Video In / Video Out jacks of the VCR and Cable Box.
3. The TVMessenger is connected to a phone jack.
4. The VCR's cable "antenna Out" outlet is connected to the TV's cable "Antenna In" outlet.
5. The TV is set to channel 3 or 4.
6. Channel selection is done from the Cable Box.

TVMessenger Installation with a Cable Box, VCR and an old style Television


VCR

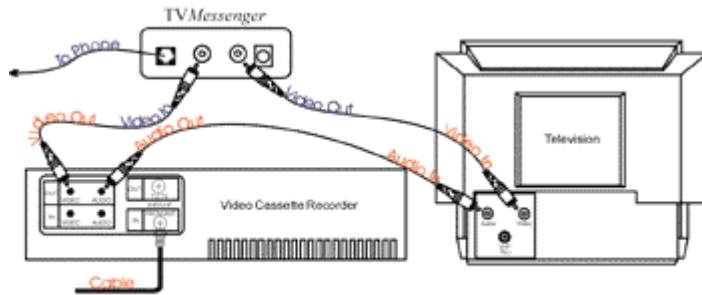

Scenario #1 - Installation Highlights

1. Main cable feed is attached to the VCR's antenna in outlet.
2. The TVMessenger is installed between the RCA Video In / Video Out jacks of the TV and VCR.
3. The TVMessenger is connected to a phone jack.
4. The TV is set to the "Video Input" (ext).
5. Channel selection is done from the VCR.


TVMessenger Installation with a VCR and Television

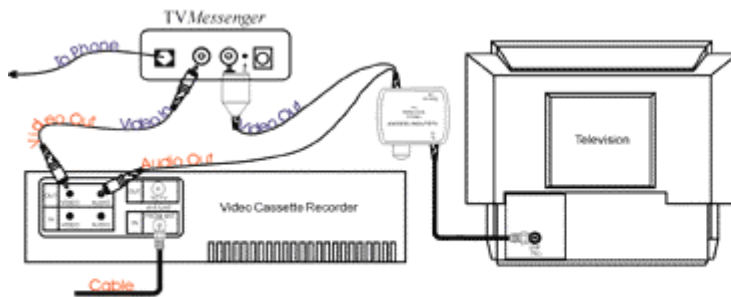

Scenario #2 - Installation Highlights

1. Main cable feed is attached to the VCR's "Antenna In" outlet.
2. The TVMessenger is installed between the RCA Video In / Video Out jacks of the VCR and TV's cable "Antenna In" outlet through the RF adaptor.
3. The TVMessenger is connected to a phone jack.
4. The TV is set to channel 3 or 4.
5. Channel selection is done from the VCR.


TVMessenger Installation with a VCR and an old style Television

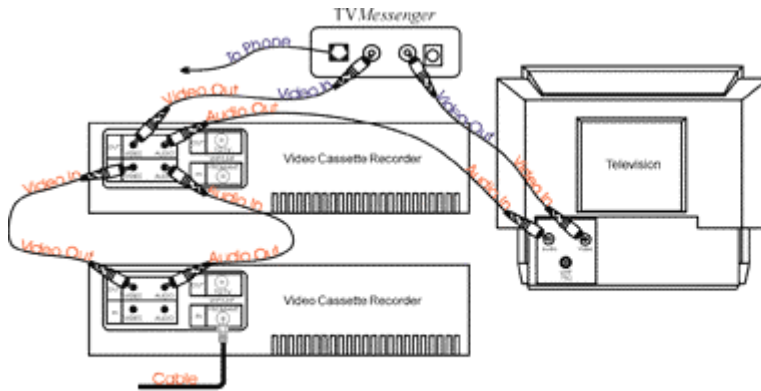

Scenario #3 - Installation Highlights

1. Main cable feed is attached to VCR#1's cable "Antenna In" outlet.
2. The TVMessenger is installed between the RCA Video In / Video Out jacks of the TV and VCR#2 .
3. The TVMessenger is connected to a phone jack.
4. The TV is set to the "Video Input" (Ext).
5. Channel selection is done from VCR#1.

TVMessenger Installation with 2 VCRs and a Television

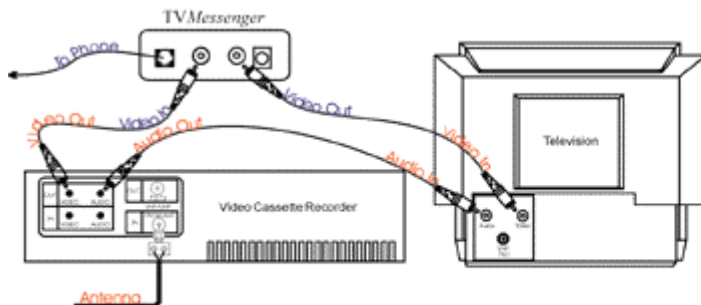


Scenario #4 - Installation Highlights

1. Main antenna feed is attached to the VCR's antenna in outlet through a 300Ω to 75Ω converter.
2. The TVMessenger is installed between the RCA Video In / Video Out jacks of the TV and VCR.
3. The TVMessenger is connected to a phone jack.
4. The TV is set to the "Video Input" (ext).
5. Channel selection is done from the VCR.

TVMessenger Installation in a non-cable environment with a VCR and a Television


Satellite

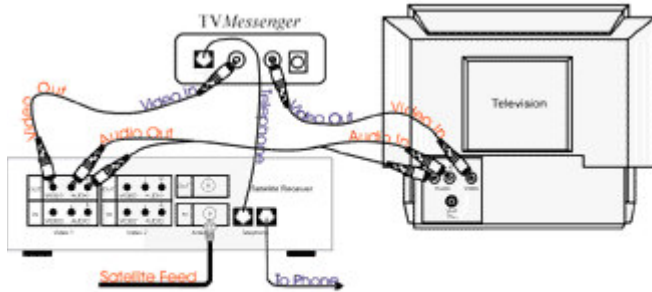

Scenario #1 - Installation Highlights

1. Main satellite feed is attached to the Satellite Receiver "Antenna In" outlet.
2. The TVMessenger is installed between the RCA Video In / Video Out jacks of the TV and Satellite Receiver.
3. The TVMessenger is connected to a phone jack on the rear of the Satellite Receiver.
4. The TV is set to the "Video Input" (ext).
5. Channel selection is done from the Satellite Receiver.

TVMessenger Installation with a Satellite Receiver and a Television

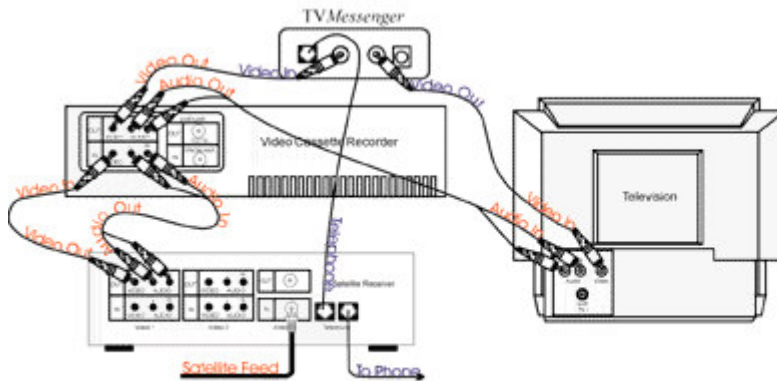

Scenario #2 - Installation Highlights

1. Main satellite feed is attached to Satellite Receivers "Antenna In" outlet.
2. The VCR is connected to the Satellite Receiver using the RCA Video/Audio In/Out jacks.
3. The TVMessenger is installed between the RCA Video In / Video Out jacks of the TV and VCR.
4. The TVMessenger is connected to a phone jack on the rear of the Satellite Receiver.
4. The TV is set to the "Video Input" (Ext).
5. Channel selection is done from the Satellite Receiver.

TVMessenger Installation with a Satellite Receiver, VCR and a Television

If you have any technical questions, which are not answered, please e-mail our technical specialists at info@GlobalAssistive.com or call our toll free number 1-888-778-4237.

**TV
MESSENGER**
Caller ID For TV



GLOBAL ASSISTIVE DEVICES, INC.

4950 North Dixie Highway, Fort Lauderdale FL 33334-3947

Tel: (954) 784-0035 . Fax: (954) 784-0047

E-mail: info@GlobalAssistive.com